



**I : Inspection L : Lubrication R : Replace or change ● : Applicable None : Not applicable**

Items	Service Intervals (Odometer reading or months, whichever occurs first)															
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	
	Odometer Reading × 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210	
<b>OPERATIONS INSIDE THE VEHICLE</b>																
Check brake pedal and clutch pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace air purifier filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
	Severe usage	R : More frequently														
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																
Check wheel alignment (Visual inspection for tyre wear)			I		I		I		I		I		I		I	
Check front and rear wheel bearings for play					I				I					I		
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check brake pads and discs for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	Severe usage	I : Every 7,500km or every 6 months														
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I	
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																
Check Automatic or CVT transmission level		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace automatic transmission fluid CVT	Normal usage	R : Every 90,000km														
	Severe usage	R : Every 45,000km														
Replace engine oil (Refer to owners manual for oil specifications)	Normal usage	R : Every 15,000km or every 12 months														
	Severe usage	R : Every 7,500km														
Replace engine oil filter	Normal usage	R : Every 15,000km or every 12 months														
	Severe usage	R : Every 7,500km														
Check exhaust gas recirculation (EGR) system		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
<b>OTHERS</b>																
Check body condition for damage		I : Every year														
Check common rail engine (Small injection quality learning - Diesel engine)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	

**NOTE:**

\*1 : If found any noise from the valve any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.