



|                            |  | Service Intervals (Odometer reading or months, whichever occurs first) |    |    |    |    |    |     |     |     |     |     |     |     |     |     |     |
|----------------------------|--|--|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
|                            |  | Months   | 12 | 24 | 36 | 48 | 60 | 72  | 84  | 96  | 108 | 120 | 132 | 144 | 156 | 168 | 180 |
| Odometer Reading × 1000 km |  | 15   | 30 | 45 | 60 | 75 | 90 | 105 | 120 | 135 | 150 | 165 | 180 | 195 | 210 | 225 |     |

### OPERATIONS INSIDE THE VEHICLE

|  |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |
|--|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Check brake pedal and clutch pedal for free play                   | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Check parking brake lever stroke and play                          | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Replace air purifier filter  | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R | R |
| Check all lights   | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Check all controls for correct operation (wipers/washers/ a/c etc) | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Check seatbelts for correct functions                              | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |

### OPERATIONS OUTSIDE THE VEHICLE

|  |              |                                    |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |
|--|--------------|------------------------------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Check wheel alignment (visual inspection for tyre wear)    | I            | I                                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Check front and rear wheel bearings for play               | I            | I                                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Check brake hoses and pipes for leakage                    | I            | I                                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Check brake pads and discs for wear                        | Normal usage | I                                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
|  | Severe usage | I :Every 7,500km or every 6 months |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |
| Check brake shoe linings and drums (drum in disc) for wear | Normal usage | I                                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
|  | Severe usage | I :Every 7,500km or every 6 months |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |
| Check fuel hoses and pipes for leakage or deterioration    |              | I                                  |   | I |   | I |   | I |   | I |   | I |   | I |   | I |   |
| Check tyre pressures                                       | I            | I                                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Check wipers rubbers                                       | I            | I                                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |

### OPERATIONS AFTER ENGINE IS WARMED UP

|   |   |              |                    |   |   |   |   |   |   |   |   |   |   |   |   |   |   |  |
|---|---|--------------|--------------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|
| Check automatic transmission for fluid leakage<br>(In case of leakage, check the fluid level) | V5AWF model   | I            | I                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I |  |
| Change automatic transmission fluid   | V5AWF model   | Normal usage | R :Every 195,000km |   |   |   |   |   |   |   |   |   |   |   |   |   |   |  |
|   |   | Severe usage | R :Every 90,000km  |   |   |   |   |   |   |   |   |   |   |   |   |   |   |  |
| Change engine oil   | Diesel-powered vehicles with 4M41 DI-D engine without DPF | Normal usage | R                  | R | R | R | R | R | R | R | R | R | R | R | R | R | R |  |
|   |   | Severe usage | R :Every 7,500km   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |  |
| Replace engine oil filter   |   | Normal usage | R                  | R | R | R | R | R | R | R | R | R | R | R | R | R | R |  |
|   |   | Severe usage | R :Every 7,500km   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |  |
| Check engine idling speed   |   | I            | I                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I |  |
| Check exhaust gas recirculation (EGR) system  |   | I            | I                  | I | I | I | I | I | I | I | I | I | I | I | I | I | I |  |

### OTHERS

|  |  |               |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |
|--|--|---------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Check body condition for damage                              |  | I :Every year |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |
| Perform common rail engine small injection quantity learning |  | I             | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |
| Road test  |  | I             | I | I | I | I | I | I | I | I | I | I | I | I | I | I | I |

#### NOTE

\*1: If found any noise from the valve any time, please check the valve clearance.

\*Severe usage\* specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

(1) Driving in dusty area.

(2) Driving on rough roads, on submerged roads, or hilly areas.

(3) Driving in cold zones.

(4) Engine idling for a long time, or short-distance travel during cold weather.

(5) Frequent sudden application of brakes.

(6) Towing of a trailer.

(7) Use as a taxi or as a rent-a-car.

(8) When more than 50% of the driving is in heavy city traffic and the ambient temperature is 32° or more.

(9) When more than 50% of the driving is at 120km/h or more and the ambient temperature is 30° or more.